


**WINDOW FRAME ANCHORING**

The 2001 FLORIDA BUILDING CODE requires window and door assemblies to be anchored according to the manufacturer's recommendations to achieve the design pressures specified (see Section 1707.4.4 Anchorage Methods). The sketches below represent the load paths used to calculate this anchoring.

**WINDOW TYPE: Fixed Casement**

**Load Path Sketch:**

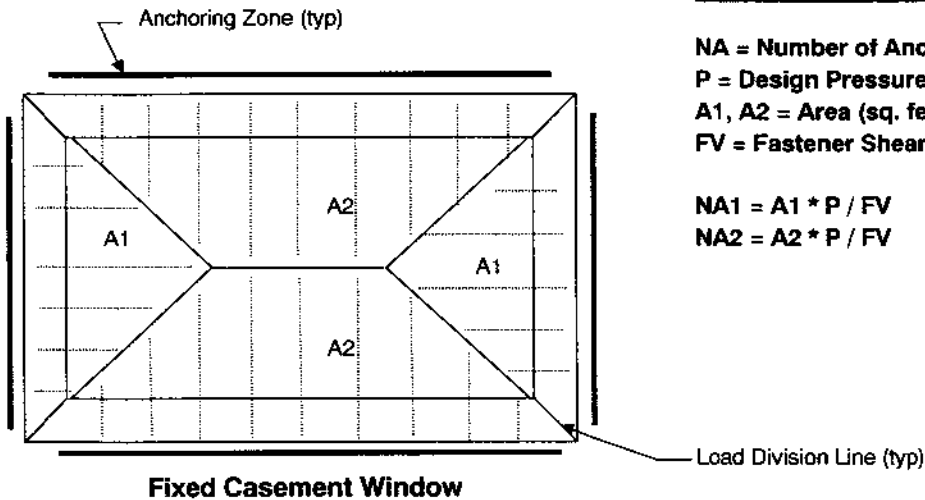

**Anchoring Formula:**

**NA = Number of Anchors Required per Zone**  
**P = Design Pressure (psf)**  
**A1, A2 = Area (sq. feet) per zone**  
**FV = Fastener Shear Value (lbs.)**

**NA1 = A1 \* P / FV**  
**NA2 = A2 \* P / FV**

**Example:**

60" high X 78" wide  
 Design Pressure = 60 psf  
 FV = 180 lbs.  
 A1 = 6.25 sf  
 A2 = 10 sf

**NA1 = A1 \* P / FV**  
 NA1 = (6.25)(60)/180 = 2.1 (round up to 3)

**NA2 = A2 \* P / FV**  
 NA2 = (12.5)(60)/180 = 4.2 (round up to 5)

Therefore, a minimum of 3 anchors in each zone A1 and 5 anchors in each zone A2 are required (16 total).

9/24/2002  
 Lyndon F. Schmidt, P.E.  
 Florida License No. 43409  
 19506 French Lace Dr.  
 Lutz, FL 33558