

Engineering Design Investigation Reports
 Special Inspector Services Registered in Florida

RAMESH PATEL, P.E.



Consulting Engineer

P.O. Box 6695 (33807-6695) Daytona: 386-255-3245
 5300 South Florida Avenue G-8 Tampa: 813-681-8844
 Lakeland, FL 33813 Phone: 863-646-0919 Orlando: 407-422-6536
 Fax: 863-646-7801

50 PSF


#8 x 5/8" PH

3

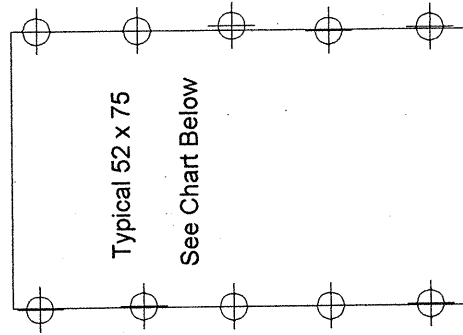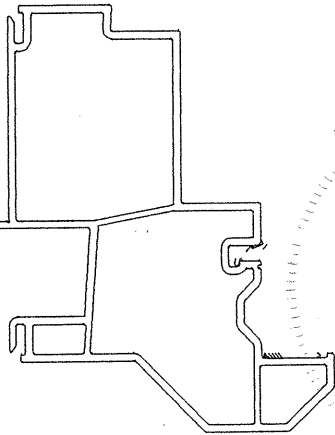

*for info P.E.
4/1/02*


2

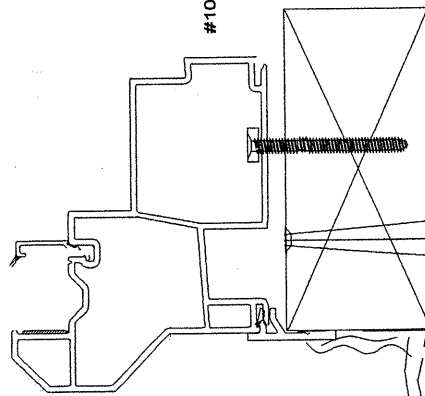

CONS.
L E D H U S Q P A O B B Y C R O I S
L E P 2 5 U S 6 2 O R H S Q O Z

Sill window into buck as required for installation.

1

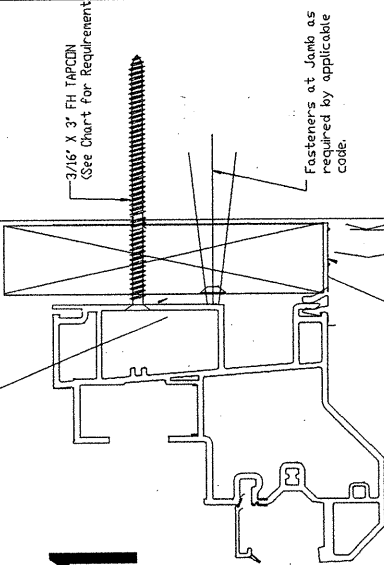

Place 3/8" minimal bead of sealant around face of buck before installing window with attached flange.

Window Fastener Requirements

- 1** For window units smaller than 49" high, use (3) 3/16" x 3" FH TAPCON fasteners in each jamb. Beginning 6" from the head and sill with the middle fastener slightly above the center. For window units larger than 49" high, use (5)
- 2** For window units smaller than 49" high, use (3) #10 x 2" fasteners in each jamb. Beginning 6" from the head and sill with the middle fastener slightly above the center. For window units larger than 49" high, use (5)
- 3** #8 x 5/8" PH screws, 2" from each corner and 6" OC



Specialty Windows of Florida, Inc.
 5520 Industrial Blvd.
 Pensacola, Florida 32583

Name:

Drawn by: R. Bradley

Date: 03/27/2002

Part DWG No. 1900 Installation