

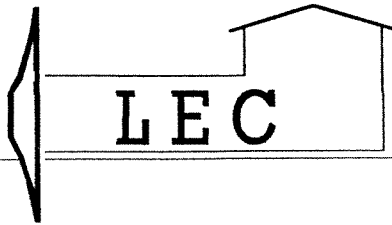


Wayne A. Block, PhD., P.E.
 Donald P. Block, P.E.

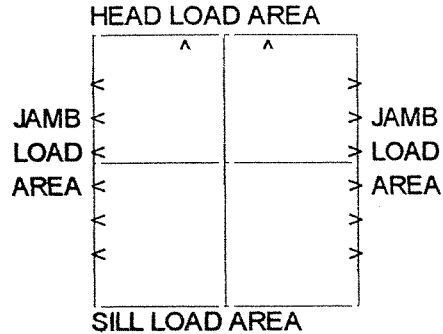

Lildon Engineering Company, Inc.
 906 Jan Mar Ct. Ste.E
 Clermont, Florida 34711
 (352) 394-2590 Ph. & FAX

FORMULA SHEET FOR FASTENER LOAD CALCULATIONS

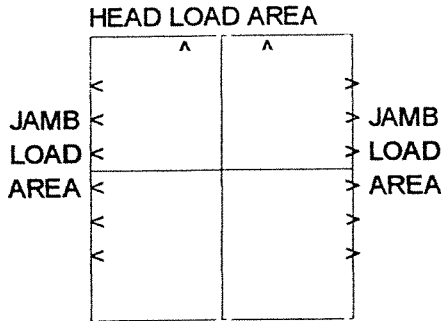

TRAPEZOIDAL LOAD PATTERN MASONRY
 NOTE: SILL LOADING NOT USED DUE TO
 ADHESIVE FASTENING OF SILL IN TEST.

TRAPEZOIDAL LOAD PATTERN FRAME
 (ALSO SLIDING GLASS DOORS)

FASTENER CALCULATION DONE IN INCREMENTS OF 5 PSF FROM
 30 TO 70 PSF ON A SPREAD SHEET.

USED FASTENER VALUES: TAPCON = 255 LB
 # 8 SCREW = 118.6 LB
 #10 SCREW = 240 LB
 FIN ONLY > # 8 SCREW = 187.2 LB (WITHDRAWAL)

CALCULATE FOR NUMBER OF FASTENERS

REQUIRED NUMBER OF FASTENERS = $\frac{\text{LOAD AREA IN SQ. FT. * D.P.}}{\text{ALLOWABLE FASTENER LOAD}}$

NOTE: THE NUMBER OF FASTENERS WERE ROUNDED UP.

THE #8 SCREWS REQUIRED TO FILL THE REMAINING FACTORY INSTALLATION
 HOLES WERE NOT FIGURED INTO FASTENER LOAD CALCULATION.

THE FIN INSTALLATION WAS DONE WITH #8 SCREWS AT 6" FROM THE
 CORNERS AND 24" ON CENTER MAXIMUM. THIS COVERED ALL EXCEPT
 EXTREMELY LARGE HORIZONTAL ROLLERS OVER 60 PSF. THIS WAS
 NOTED ON THE CHART. ALL OTHERS CHECKED IN LARGEST SIZES
 OK UP TO 70 PSF.

THE 2X BUCK STRIP MASONRY INSTALLATION USED #10 SCREWS INTO
 ALL OF THE FACTORY PUNCHED INSTALLATION HOLES. THIS WAS
 CHECKED IN THE LARGEST SIZES UP TO 70 PSF. THIS COVERED ALL
 EXCEPT THOSE LARGEST HORIZONTAL ROLLERS OVER 60 PSF. THIS
 WAS NOTED ON THE CHART.

Wayne A. Block
 PROFESSIONAL ENGINEER
 STATE OF FLORIDA
 LICENSE NO. 52583
 FEB 28 2002